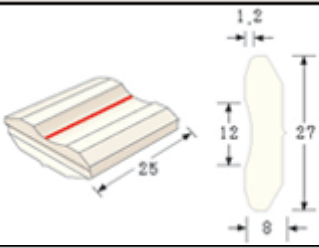
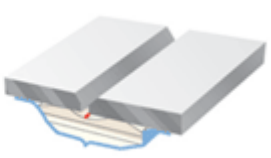
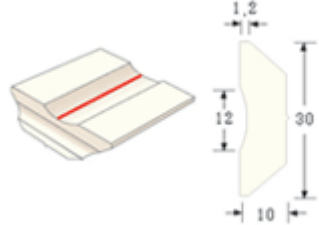
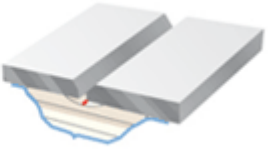
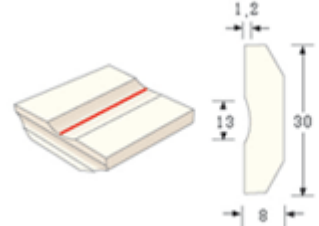
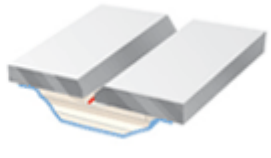
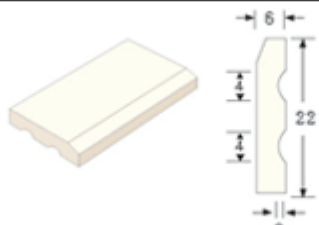
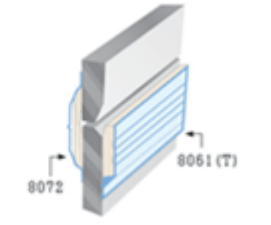
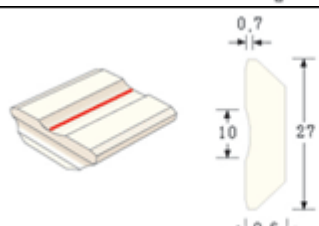
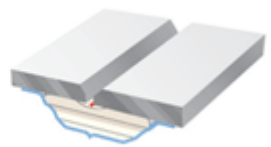
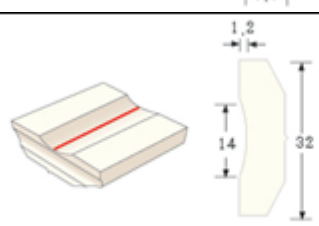
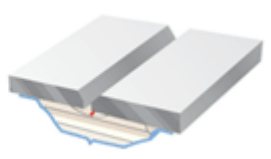



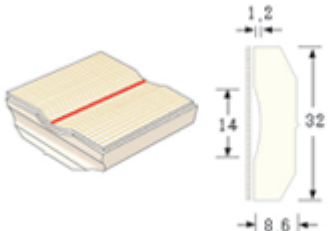


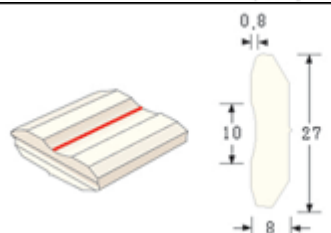


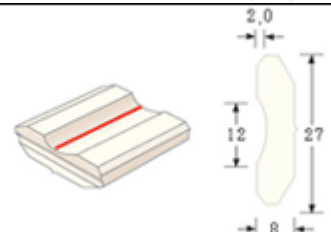
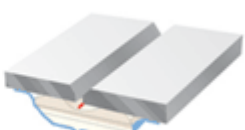

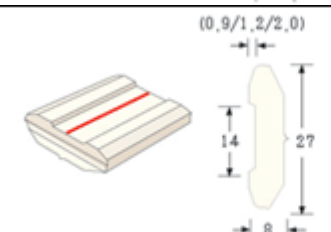


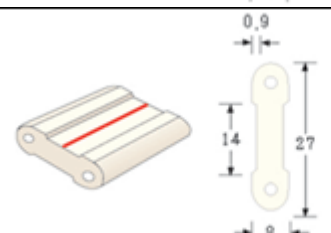
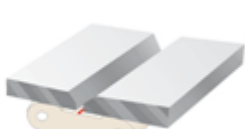

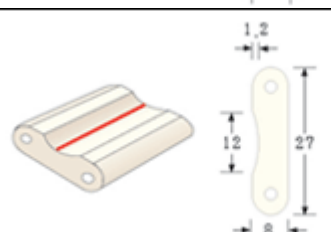

гр. Варна  
 Западна промишлена зона  
 tel/fax: +359 52 50 09 74  
 e-mail: karnes\_vn@abv.bg

гр. Русе  
 ул. Николаевска 80  
 tel: +359 82 82 74 86  
 fax: +359 82 82 40 87

PRODUCTS	DIMENSION	SHAPES	SERVICE
<b>CBM 8061</b>			<b>FCAW &amp; GMAW</b> Shipbuilding, Marine Plant, Plant, Steel Structures, etc. most widely used.
<b>CBM 8061 (1)</b>			<b>FCAW &amp; GMAW</b> Used the same as CBM 8061 Suitable for multi-plate welding
<b>CBM 8061 (J)</b>			<b>FCAW &amp; GMAW</b> Used the same as CBM 8061 Suitable for bigger root open than in CBM 8061
<b>CBM 8061 (T)</b>			<b>FCAW &amp; GMAW</b> Used together with CBM 8072. Prevent front bead droop in horizontal welding.
<b>CBM 8061 (3)</b>			<b>FCAW &amp; GMAW</b> Used the same as CBM 8061 Suitable for narrow gap or high current
<b>CBM 8061 (4)</b>			<b>FCAW &amp; GMAW</b> Used the same as CBM 8061 Suitable for bigger root open than in CBM 8061

гр.Варна  
 Западнапромишленазона  
 tel/fax: +359 52 50 09 74  
 e-mail: karnes\_vn@abv.bg

гр.Русе  
 ул. Николаевска80  
 tel: +359 82 82 74 86  
 fax: +359 82 82 40 87

PRODUCTS	DIMENSION	SHAPES	SERVICE
			<p><b>FCAW &amp; EGW</b>                      Used the same as CBM 8061                      Suitable when elegant back bead is needed                      When used for EGW, no additional JIG is needed</p>
			<p><b>FCAW &amp; GMAW</b>                      Exclusively for Vertical-Up                      Best for thin plate (12T and thinner)</p>
			<p><b>FCAW &amp; GMAW</b>                      With deeper groove, slag removal made easy</p>
			<p><b>FCAW &amp; GMAW</b>                      Used the same as CBM 8061</p>
			<p><b>FCAW &amp; GMAW</b>                      Used the same as CBM 8061 ceramic blocks are mounted on wire</p>
			<p><b>FCAW &amp; GMAW</b>                      Used the same as CBM 8061 ceramic blocks are mounted on wire</p>

гр.Варна

Западна промишлена зона

tel/fax: +359 52 50 09 74


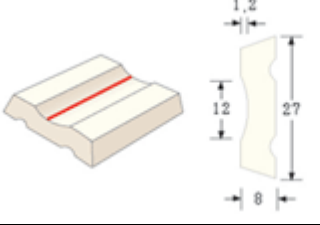
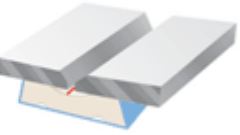

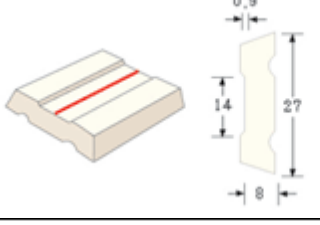
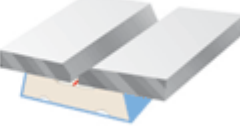

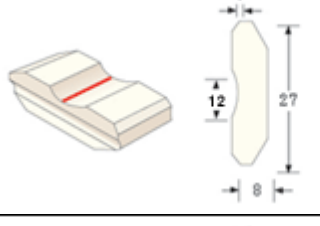
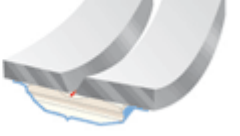

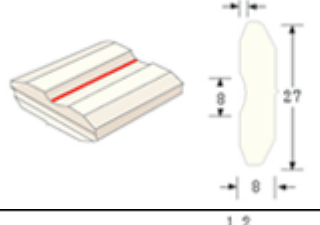
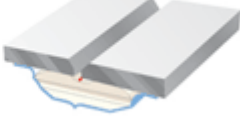

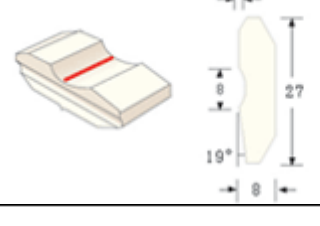




e-mail: karnes\_vn@abv.bg

гр.Русе

ул. Николаевска 80


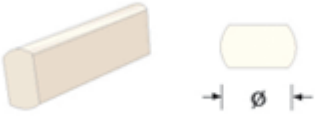












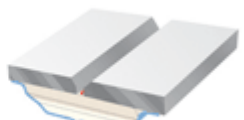

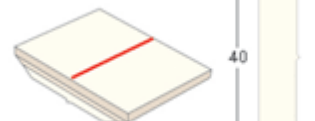

tel: +359 82 82 74 86

fax: +359 82 82 40 87

PRODUCTS	DIMENSION	SHAPES	SERVICE
			<p><b>FCAW &amp; GMAW</b> Used the same as CBM 8061 Backing strips are used in metal case as fastening elements, together with magnetic clamps</p>
			<p><b>FCAW &amp; GMAW</b> Used the same as CBM 8061 Backing strips are used in metal case as fastening elements, together with magnetic clamps</p>
			<p><b>FCAW &amp; GMAW</b> Suitable for pipe, cylinder part, Designed to be bent easily.</p>
			<p><b>FCAW &amp; GMAW</b> On narrow root opening for small back bead forming.</p>
			<p><b>FCAW &amp; GMAW</b> Used the same as 8062 Suitable for pipe, plant work.</p>
			<p><b>FCAW &amp; GMAW</b> Mainly for back plate. Suitable for Plant, Steel Structures, High Pressure Pipe (<math>\varnothing</math> : 5,7,10,12,15)</p>


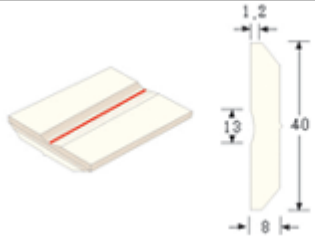
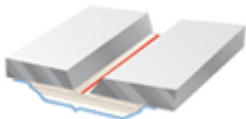

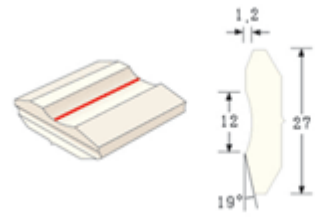


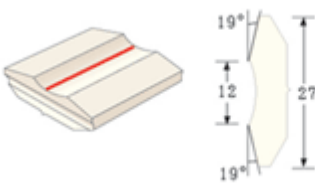


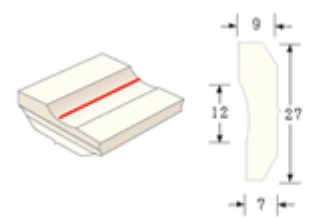


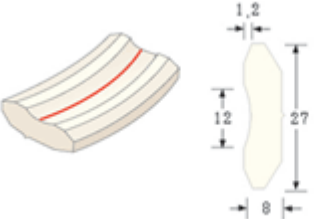


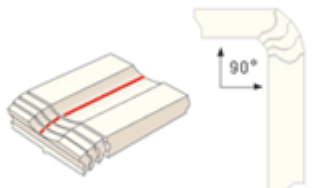

гр.Варна  
 Западнапромишленазона  
 tel/fax: +359 52 50 09 74  
 e-mail: karnes\_vn@abv.bg

гр.Русе  
 ул. Николаевска80  
 tel: +359 82 82 74 86  
 fax: +359 82 82 40 87

PRODUCTS	DIMENSION	SHAPES	SERVICE
			<p><b>FCAW &amp; GMAW</b>                      Used the same as CBM-8063A                      Suitable for first plate hot crack where extra caution is needed( <math>\phi</math> :7,10,12)</p>
			<p><b>FCAW &amp; GMAW</b>                      Used the same as CBM8063(A).                      It can be applied for multi radius degree (5~8<math>\phi</math>, 8~10<math>\phi</math>, 10~12<math>\phi</math>, 12~15<math>\phi</math>)</p>
			<p><b>FCAW &amp; GMAW</b>                      Used for X, K open line                      Selection of line angle available (30°, 60°, 90°)</p>
			<p><b>FCAW</b>                      Used the same as CBM 8064.                      Selection of line angle available (25°, 65°, 90°)</p>
			<p><b>FCAW &amp; GMAW</b>                      Ceramic with no groove                      Suitable where back bead is not needed</p>
			<p><b>FCAW</b>                      Used for wide gap caused by Degree Difference                      Suitable for Grow up</p>


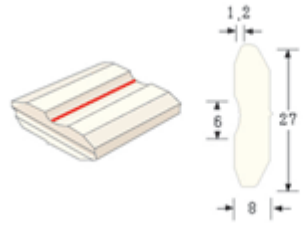
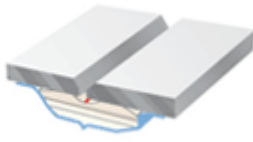

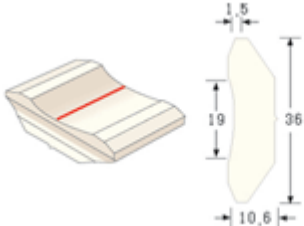
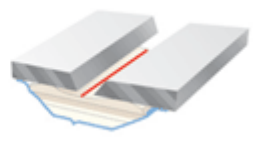

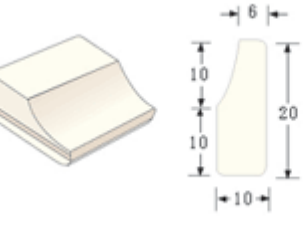
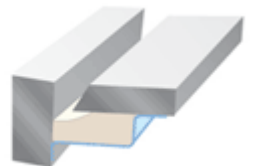

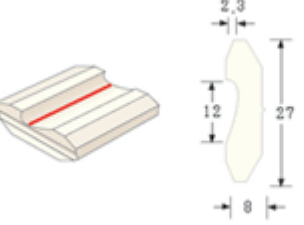


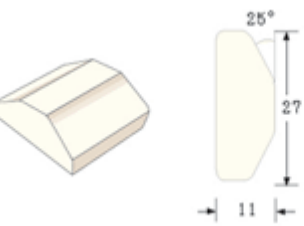
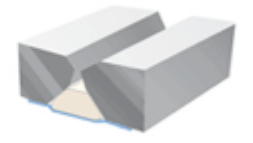

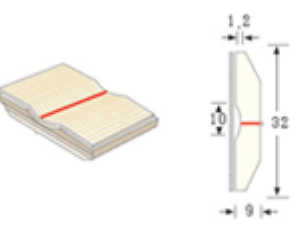
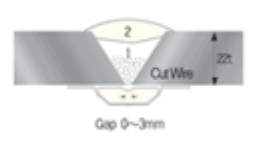
гр.Варна  
 Западнапромишленазона  
 tel/fax: +359 52 50 09 74  
 e-mail: karnes\_vn@abv.bg

гр.Русе  
 ул. Николаевска80  
 tel: +359 82 82 74 86  
 fax: +359 82 82 40 87

PRODUCTS	DIMENSION	SHAPES	SERVICE
			<b>FCAW</b> Used the same as CBM 8065 (W). Suitable for grow up with back bead.
			<b>FCAW &amp; GMAW</b> Used for chamfering caused by difference in plate thickness (slope angle 19°)
			<b>FCAW &amp; GMAW</b> Used for double chamfering joints. This back-up tape allows you to place metal exactly where you want it.
			<b>FCAW &amp; GMAW</b> Used for misalignments caused by difference in plate thickness (deviation more than 2mm)
			<b>FCAW</b> Used for man holes, access holes It is bent to the left or right for curved welding line. (R: 100, 150, 172, 200, 250, 300)
			<b>FCAW</b> Welding supplement specially designed to prevent flaws in angle welding

гр.Варна  
 Западнапромишленазона  
 tel/fax: +359 52 50 09 74  
 e-mail: karnes\_vn@abv.bg

гр.Русе  
 ул. Николаевска80  
 tel: +359 82 82 74 86  
 fax: +359 82 82 40 87

PRODUCTS	DIMENSION	SHAPES	SERVICE
			<b>FCAW &amp; GMAW</b> Suitable for thin plates (6T and thinner) Mainly used for downward welding
			<b>FCAW &amp; GMAW</b> Used for narrow gap welding on wide gaps caused by a large root opening
			<b>FCAW &amp; GMAW</b> Suitable for fillet welding as used in the making of Plant, Steel Structures, Box, etc.
			<b>FCAW &amp; GMAW</b> Specially designed to prevent back bead droop in horizontal welding
			<b>FCAW &amp; GMAW</b> Used the same as CBM 8064 Suitable for bigger X, K open line angle
			Designed for automatic welding with high temperature. Welding is done by Just 2 passes with cut-wire.